

## NX Series Firmware Upgrade guide

### 1. Before upgrading the firmware

- Make sure you use fully charged batteries.  
If camera malfunction is caused during a firmware upgrade for the reasons given above, the mainboard may have to be serviced by a Samsung service centre, which may result in major repair charges.
- Before upgrading the firmware, make sure that you format the memory card on your PC or camera and then download the necessary firmware file.
- Download the firmware file into the root directory of the memory card.
- Do not operate the camera, remove the batteries, or cut the power while upgrading firmware. Operate the camera only after the firmware upgrade is complete.

### 2. Version information of NX series latest Firmware


- NX5 : 1.21
- NX10 : 1.31
- NX11 : 1.11
- NX100 : 1.12

### 3. Improvement (Same as NX5/NX10/NX11/NX100)


- Compatible with Samsung New Lens 60mm & 85mm who use Samsung NX5/NX10/NX11/NX100 cameras.

### 4. How to upgrade firmware? (This manual had been made based on NX11 camera)

- 1) Download the firmware file into the root directory of the SD memory card.
- 2) Insert the SD card on which the firmware file is to be saved.
- 3) Press the menu button.
- 4) Move to "Setup Menu 3" (Press the left button of 4-way key.)
- 5) Select the "Firmware Update"  
(After pressing the left button of 4-way key, press the OK button for 1 time.)

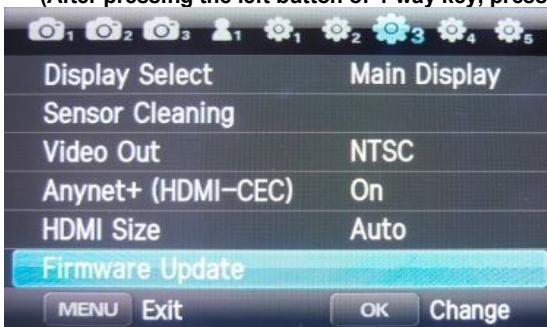

### 6) Select the "Body Firmware". (Press the OK button for 1 time)

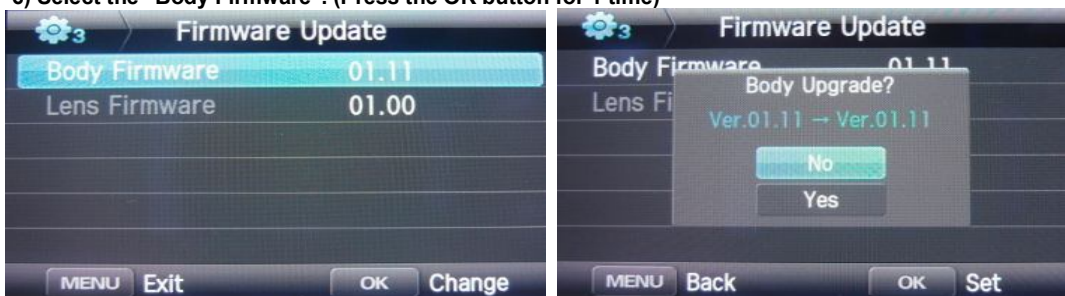

### 7) Select "Yes". (After pressing the down button of 4-way key, press the OK button for 1 time.)



8) The upgrading progress bar will be increased, then after finishing it, camera will turn off



※ Should you need further detailed information, or if you experience difficulty in upgrading firmware, do not proceed with the process on your own. Visit a Samsung service centre near you.